



# Nigel Lawton 009

9mm gauge

## 009/HOn30/HOe Wagon Kit

### Japanese Plastic Moulded Vee Tipper



<http://www.geocities.com/nigellawton009/VeeTipper.html>

Please read these English instructions and study the diagrams on the Japanese instructions carefully before starting to build this kit. If you can translate the Japanese I would be grateful for a copy!


This is not a toy but a scale model and is not suitable for children

This kit is best built using liquid poly or polystyrene cement. Use your chosen glue very sparingly to avoid dribbles and runs.

Remove the moulded parts from the sprue carefully using a sharp craft knife or scalpel or specialised snips. Practice the assembly dry before gluing. Fit the wheels to the axles in a lathe or press if possible, otherwise take great care to insert the axles squarely into the wheel mouldings. The step in the axle is there to set the gauge, so push the wheels onto the axles as far they can go.

Drill the 0.6mm & 0.8mm holes in the locations shown if you intend to use the link and pin couplers provided. Note that the hook on each end of the wagon is compatible with 009/HOe/HOn30 loop couplers, but no provision is made for the loops themselves. With careful modification of the chassis after assembly it should be possible to fit coupler loops either from wire or Greenwich coupler loops (but I do not make any promises).

# なべとろ

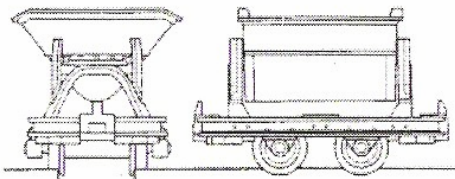

- ① 部品をランナーから、ニッパなどで切り離します。
  - ② 切り口をカッターナイフなどで仕上げます。(特に車輪の裏側)
  - ③ 穴あけの必要な部分は、ドリルで穴をあけます。
  - ④ 車輪を車軸に圧入します。
  - ⑤ 全体を反組みにします。
  - ⑥ プラ用接着剤(さらさらタイプ)を少量使用して接着します。
- このキットには資材線、接着剤は入っていないので、別にお買い求め下さい。

